




INSTALLATION INSTRUCTIONS

INSTALLATION

1. Install Graphics (Model No. 5330FN or Part No. 37003)
2. Remove white cable tie from unit and position the racks in correct position.
NOTE: Keep black cable ties in place. Top and middle racks are positioned under rack mount bolts on the rack supports.
3. Plug power cord into outlet.
4. Turn on power switch located on the rear of the unit.
5. Pre-heat the unit for approximately one hour. The "I" setting is for low warmth and the "II" setting is for high warmth. "O" represents the off position (See below).

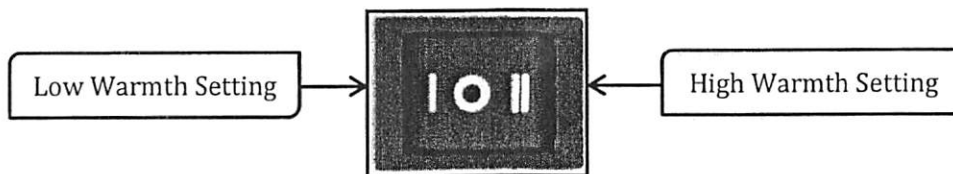

6. Dispensing temperature for cheese cups is between 125°F and 140°F.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

1. For warming cheese cups, use only the "II" high warmer setting.
2. Pretzel warming can be done using the "II" high or "I" low settings for desired warmth.
3. Other foods may also be warmed using this machine.

NOTE: This unit is only for the warming of prepackaged food products. Do not dispense volatile foods.