



Hayes Specialties Corporation

www.eHayes.com

1761 East Genesee Ave, Saginaw, MI 48601 USA

Local/Intl (989) 755-6541

Fax (989) 755-2341

Toll Free (800) 521-5219

e-mail: Info@eHayes.com

POPCORN MACHINE INSTRUCTIONS

****IMPORTANT****

While it performs best plugged directly into a 120 volt power supply, if you must use an extension cord, use a #10 wire cord as short as possible.

OPERATION

1. Place machine on a flat, stable surface.
2. Plug in machine.
3. Turn HEAT and LIGHT switches to ON (wait 3-4 minutes for kettle to heat up). The kettle will get very hot! **USE CAUTION ALWAYS**
4. When ready to add oil and popcorn, turn KETTLE MOTOR switch ON to start the motor.
5. Open the NAKSPAK and pour oil and popcorn into the kettle. (**DO NOT OVERFILL: only pop one NAKSPAK at a time.**)
6. Close the kettle lid. DO NOT FORGET TO COVER THE KETTLE OR THE OIL AND POPCORN WILL IMMEDIATELY SPRAY OUT ALL OVER THE SIDES OF THE MACHINE.
7. While the corn is popping, open the plexiglass doors slightly to prevent fogging.
8. Popcorn will pop quickly, and when the popping ceases, TURN BOTH THE KETTLE HEAT AND MOTOR SWITCH OFF.
9. Dump popped corn by pushing the black handle downward.
10. Put the kettle back in place using the black handle. **CAUTION: KETTLE IS VERY HOT!**
11. If you are making several batches continuously, you do not have to wait for machine to reheat as it will already be pre-heated.
12. Remember to turn HEATING LIGHT switch to ON in order to keep your popcorn warm.
13. For a video on how to make popcorn with the machine, scan the QR code below.



*****DOORLESS MACHINE VARIATION*****

Lid sticks to top of machine by magnet, make sure to pull lid down for popping. Make sure kettle is in place to pop corn. Use black handle to to kettle to holding bolt.

CLEANING

1. Wait at least one hour until the kettle has completely cooled. **CAUTION:** The kettle can be very hot.
2. Wipe all oil off the inside and outside of the kettle with a DRY clean soft cloth. **NEVER PUT WATER ON THE KETTLE!!**
3. Wipe down the inside and outside of the machine and the popcorn scoop. Make sure to clean out the small try located at the bottom of the machine.
4. **DO NOT** use any cleaning chemicals on the machine as they may damage it.
5. Machine must be returned clean in order to be refunded the deposit for the machine.