


**Deluxe Speedy Electronic Bingo**

MACHINE W/ WOODEN BALLS& LED DISPLAY

Part Number: 17657

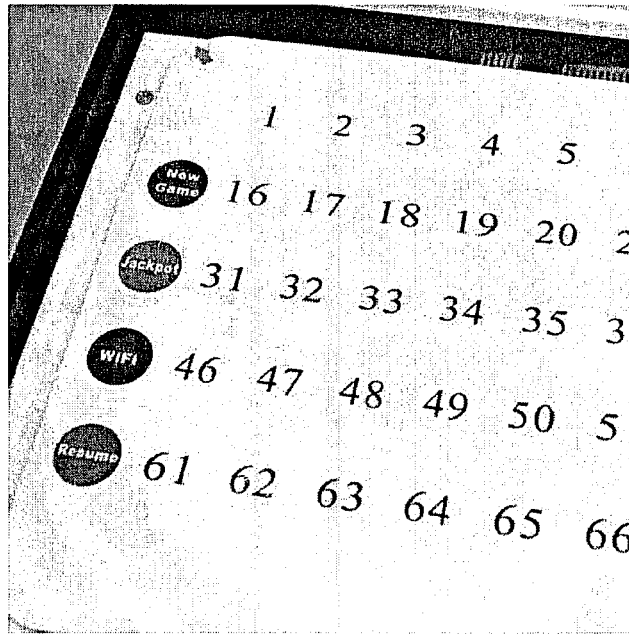

**Deluxe Speedy Electronic Bingo**

MACHINE W/ WOODEN BALLS& LED DISPLAY

Part Number: 17657

There are 2 parts to this. The Speedy tray/cage  
And the 2 digit led display. The display is wireless.

You assemble the cage to the table.

When ready to play, plug in the 2 digit display then plug in the machine itself. After calling a ball, place it in the appropriate hole on the tray and press down slightly. It should light that number on the 2 digit display. Keep calling balls until you are finished with the game. At that point you lift the tray and the called balls will roll back into the cage. With the tray lifted you will see 4 switches.

**NEW GAME** ( Resets the display to blank for the next game)

JACKPOT (Flashes the last number called for a few times)

WIFI (Turns the wifi on/off)

RESUME ( Not used)